

#### Instructions for use:

From the **CV-USB-RS485** adapter, connect a twisted pair copper wire to the **TX+** connection, on the opposite end connect to the + of the cameras RS485 connection.

From the **CV-USB-RS485** adapter, connect a twisted pair copper wire to the **TX-** connection, on the opposite end connect to the - of the cameras RS485 connection.

If you need to connect more than one camera you can connect a 2nd set of twisted pair wires to the connection of the 1st cameras RS485 connection and daisy chain to your next camera. 1-7

*Please make sure to ID each camera 1-7 and confirm baud rate is set to 9600 (standard)*

