



Please note that you can upgrade the firmware through USB or the Webpage.
This manual will guide you through both methods.


1. USB FW UPDATE PROCESS

Version: VUAxxx FW File: .up

1.1 Preparation

VS-PTC-300	Power adapter/ power cord	PC or Laptop	USB Disk (Format FAT 32)
			

1.2 Place the FW file inside a folder which should be named 'FW', then place the FW folder in your USB drive.

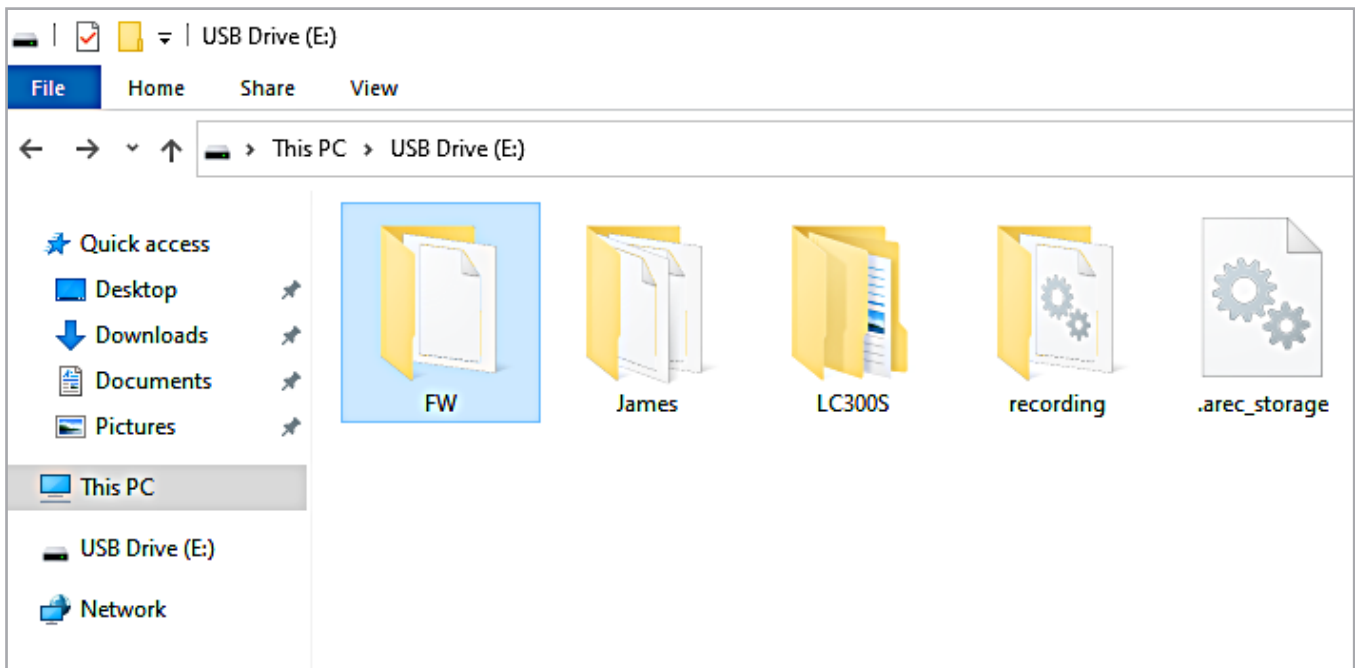


1.3 Insert the USB drive into the USB port on VS-PTC-300.



1.4 Go to [Setting] > [About Device] > [USB Flash Drive].
Choose the firmware file you placed in the USB.



1.5 You will find the firmware file you have stored in the USB Flash Drive section.

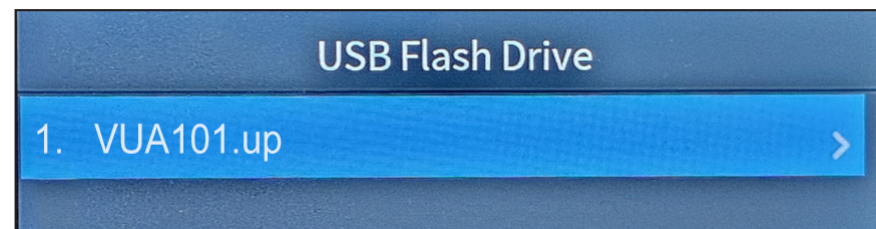


1.6 Once you click on the firmware file, the screen will display that the update is in progress.



1.7 After the upgrade process is completed, the VS-PTC-300 will restart automatically.

1.8 Go to [Setting] > [About Device] to verify your firmware version.

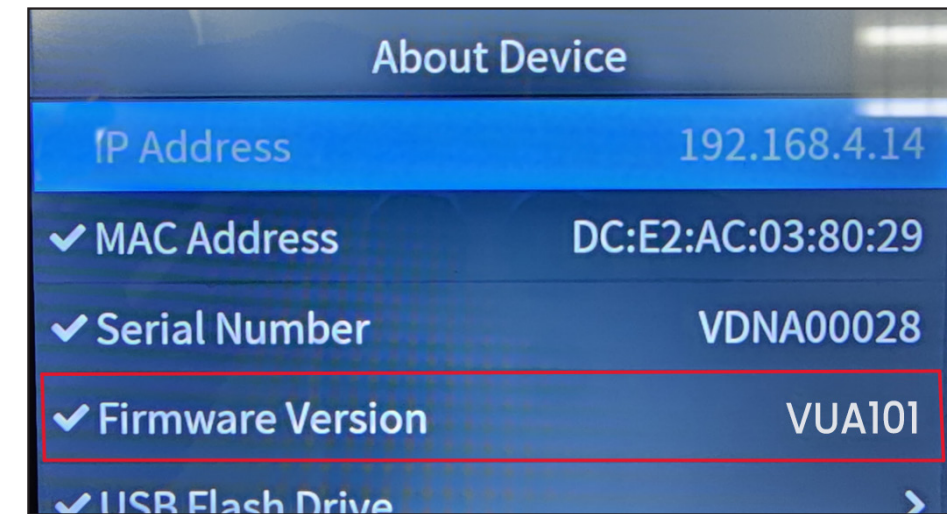


2. WEBPAGE FW UPDATE PROCESS

2.1 Preparation




2.2 Connection

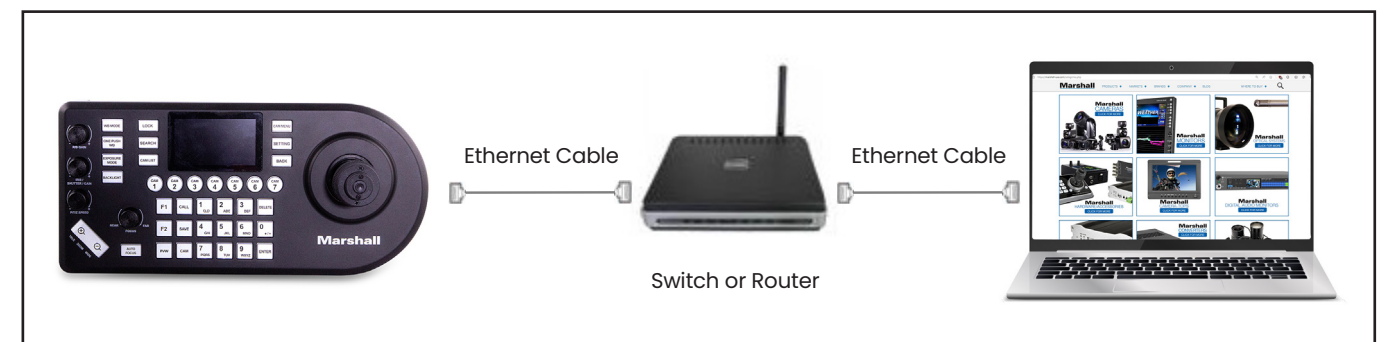


2.3 Ensure your PC or laptop is on the same network segment as the VS-PTC-300.

2.4 Type the IP address of VS-PTC-300 in your browser to access the login page.



User: admin
Password: 9999

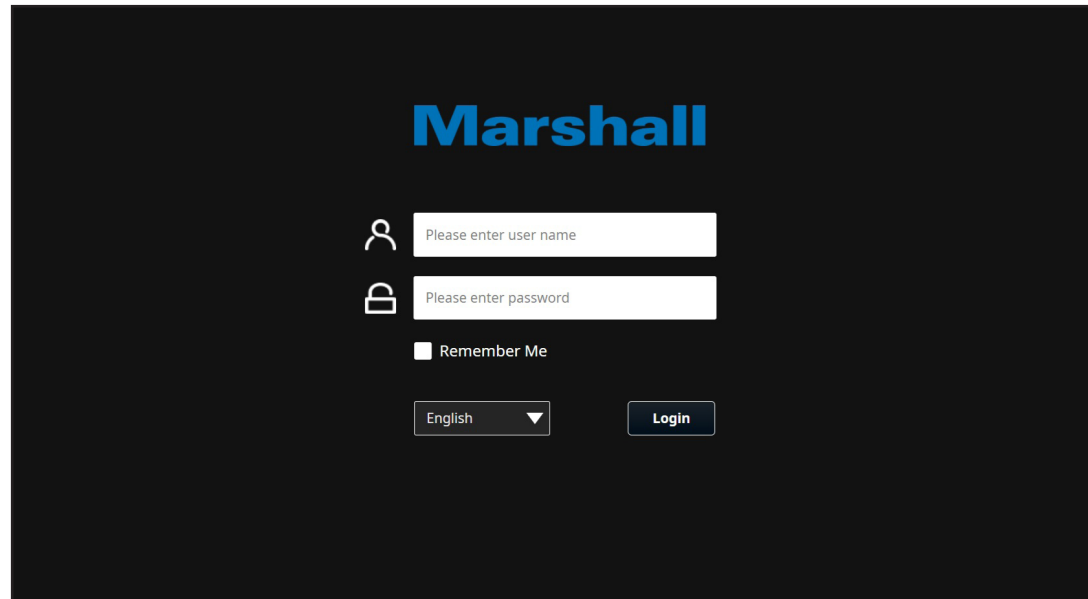


2.6 Drag the file here or click "Click to upload" to choose the firmware file you have stored on your computer.

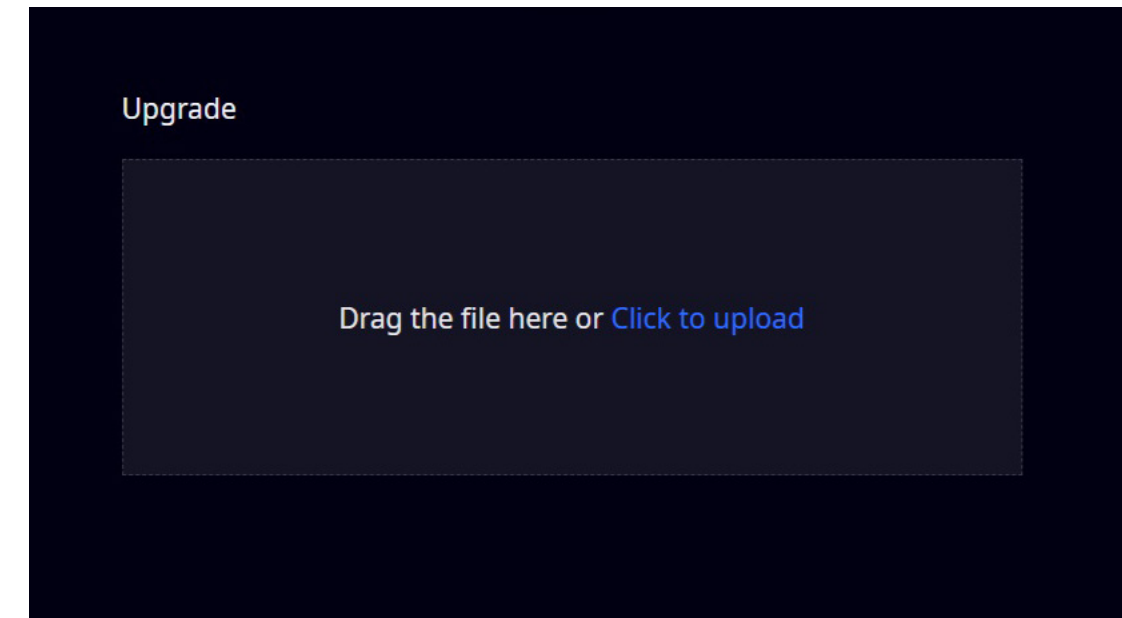


2.5 Navigate to the Firmware section to verify your current firmware version.

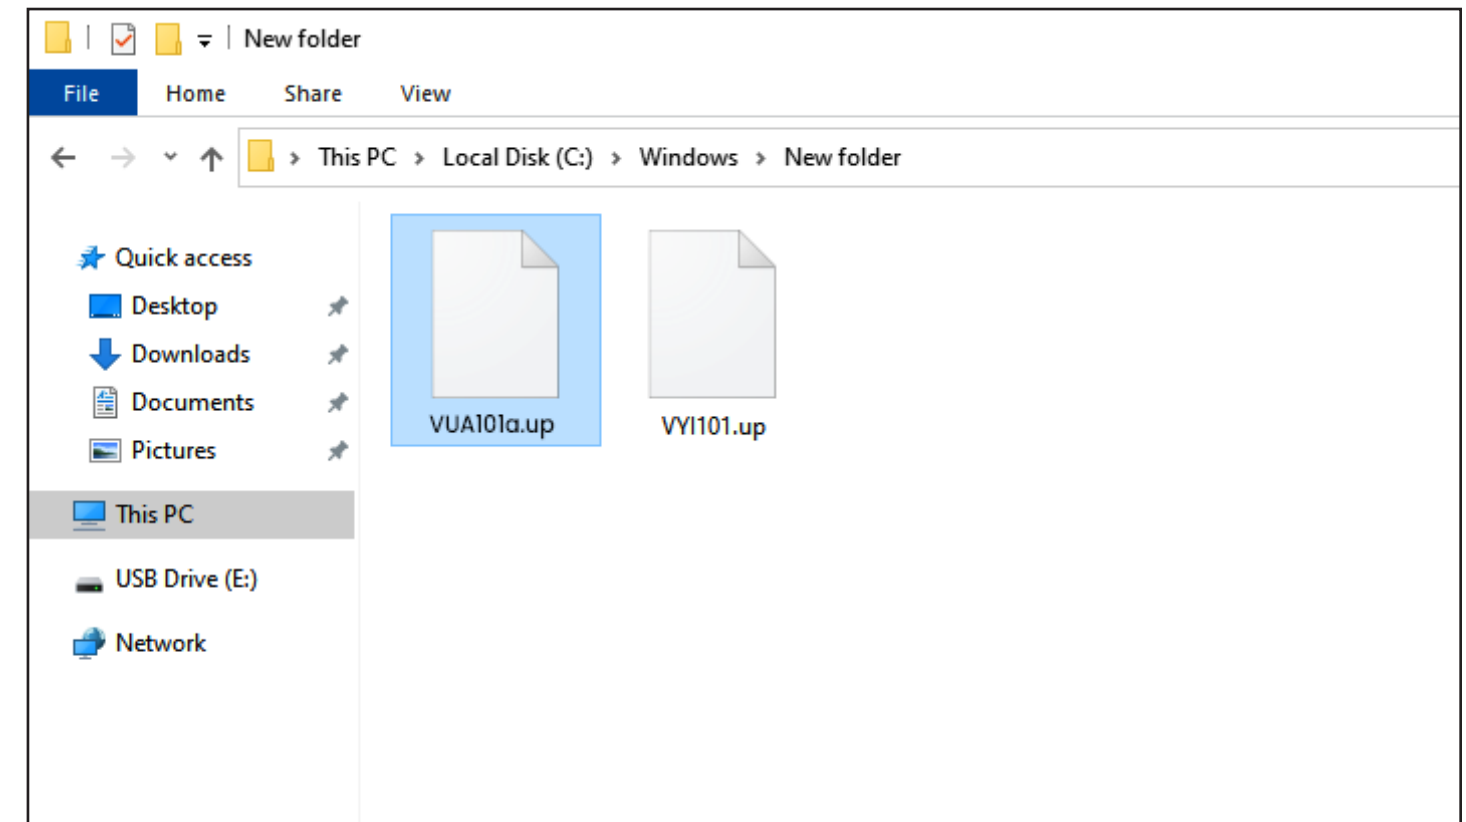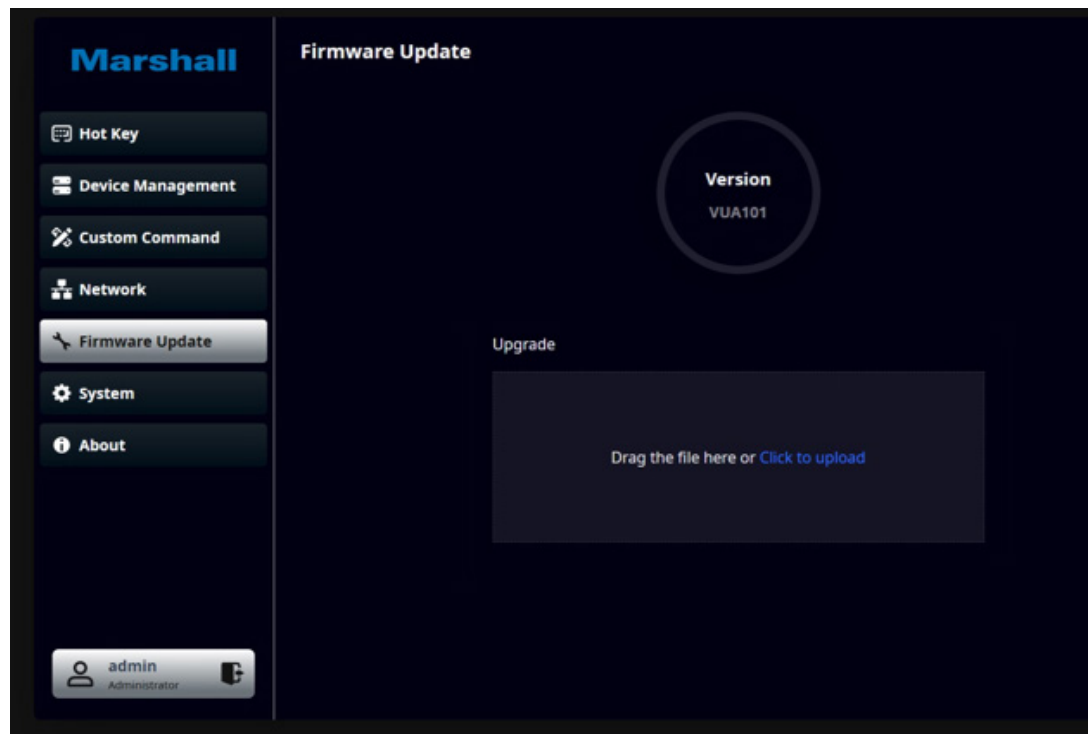

2.7 After pressing the Start Upgrade, the upgrade process will be initiated.

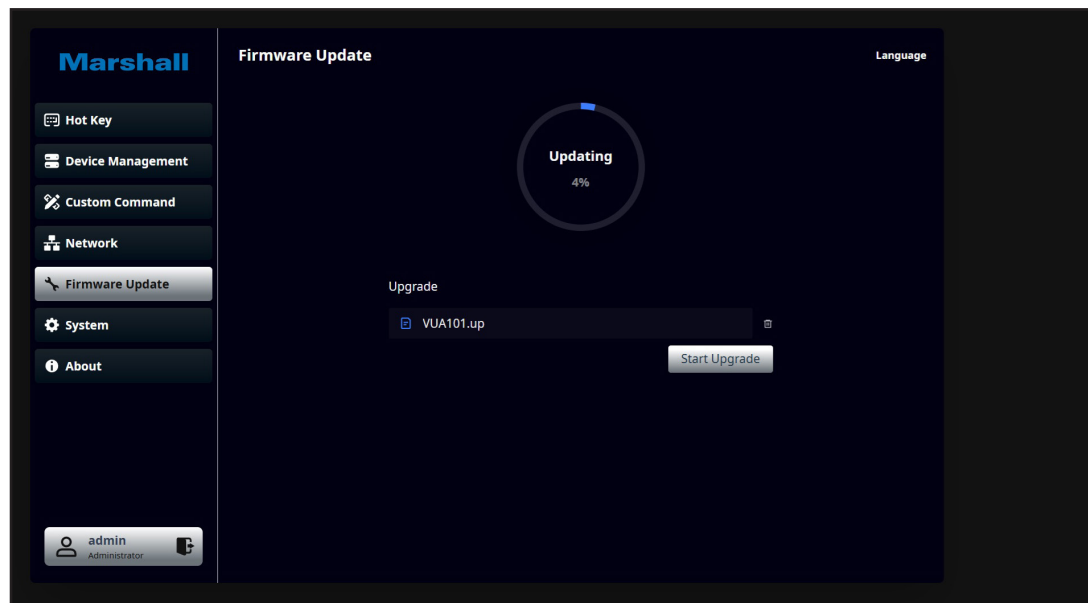

2.9 After refreshing the webpage, come back to the Firmware section to verify your firmware version.

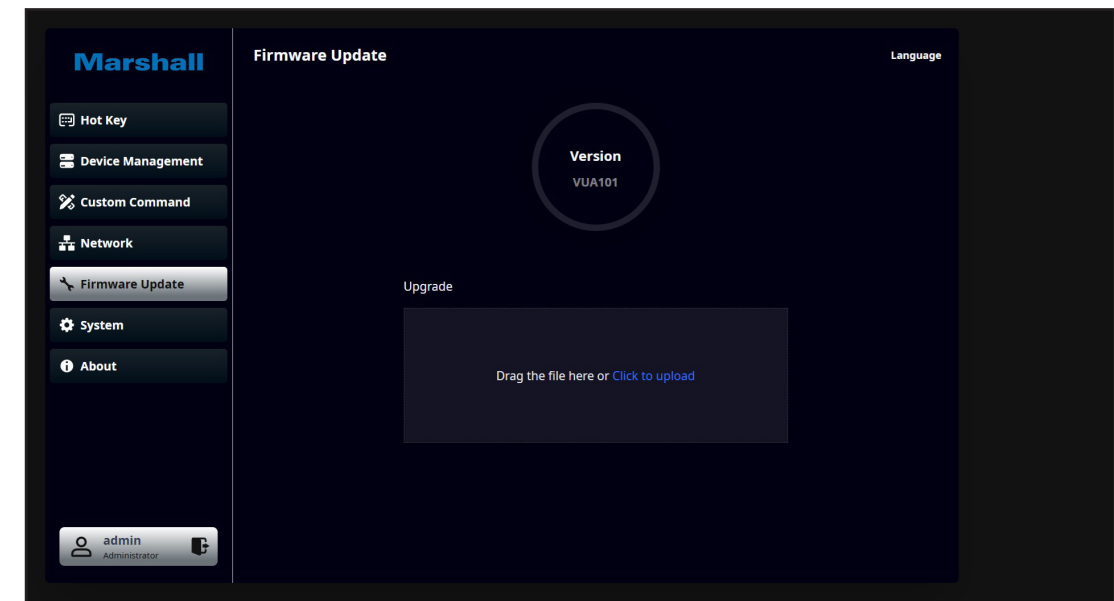

2.8 Once the upgrade is completed, an "Update Successfully" window will appear.

