



## CV355-10X

Compact 10x Zoom HD Camera  
3G/HDSDI - HDMI

**User Manual**

# Table of Contents

- Table of Contents .....01
- 1. General Information .....02
- 2. Menu Structure .....03
- 3. OSD Joystick and Button .....05
- 4. WB Control .....06
- 5. AE Control .....07
- 6. Focus Control .....08
- 7. Day / Night .....09
- 8. Audio ..... 10
- 9. Backlight .....11
- 10. Image Control .....12
- 11. Special .....13
- 12. Setup .....14
- 13. Reset ..... 15
- 14. Exit .....16
- 15. Troubleshooting .....END
- Warranty .....END

## 1. General Information

Thank you for your purchase of a Marshall Miniature or Compact Camera.

The Marshall Camera team recommends thoroughly reading this guide for a deep understanding of on-screen-display (OSD) menus, breakout cable operation, settings adjustment explanation, troubleshooting, and other critical information.

Please carefully remove all contents of box, which should include the following components:

**CV355-10X includes:**

- Camera Breakout Cable (Power/RS485/Audio)
- IR Remote Controller
- 12V Power Supply

The CV355-10X Camera utilizes a built-in 10x optical zoom lens.

Each camera comes set to default at 1920x1080p @ 30fps out of the box; which can be changed in the OSD Menu to a variety of resolutions and framerates.


To RESET Camera to default settings (1920x1080p30fps) power-cycle the camera then use the following combo on OSD Joystick: UP, DOWN, UP, DOWN, then push and HOLD joystick in for 5 seconds then release.

## 2. Menu Structure

SETUP	SUB MENU	SUB MENU
WB CONTROL	AWB	
	ATW	
	ONE PUSH	
	INDOOR	
	OUTDOOR	
	MANUAL	BLUE
AE CONTROL	AUTO	RED
		AGC MAX
		SENS UP
		AE BRIGHT
		FLICKERLESS
	SHUT PRI	SHUTTER
		AGC MAX
		SENS UP
		AE BRIGHT
	IRIS PRI	IRIS
		AGC MAX
		SENS UP
		AE BRIGHT
		FLICKERLESS
	AGC PRI	AGC
		SENS UP
		AE BRIGHT
		FLICKERLESS
	MANUAL	SHUTTER
		IRIS
		AGC
SENS UP		
BRIGHT	BRIGHT LEVEL	
FOCUS CONTROL	FOCUS MODE	
	AF MODE	
	DZOOM	
	ZOOM SPEED	
	NEAR LIMIT	
	AF INTERVAL	
	AF AREA / SIZE	
DAY / NIGHT	DAY	
	NIGHT	NIGHT COLOR
	AUTO	

SETUP	SUB MENU	SUB MENU
AUDIO	MIC/LINE	AUDIO LEVEL
		MIC ATTENUCATOR
		SAMPLE BITS
BACKLIGHT	BACKLIGHT	BLC
		HLM
		SPOT
	WDR	
	DWDR	
IMAGE CONTROL	DEFOG	
	LENS SHADING	
	CONTRAST	
	BRIGHTNESS	
	SATURATION	
	HUE	
	EDGE ENHANCE	
	AUTO SATURATE	
	IMAGE EFFECT	
	IMAGE MIRROR	
	IMAGE FLIP	
	BLACK WHITE LV	BLACK LEVEL
		WHITE LEVEL
	GAMMA CORRECT	
	DNR	DNR MODE
		DNR LEVEL
	SPECIAL	ZOOM MAG
DIS		
BINNING		
DEFECT PIXEL		
FREEZE		
MOTION DETECT		
PRIVACY		
CAM TITLE		
SETUP	COMMUNICATION	CAM ID
		ID DISPLAY
		BAUD RATE
	MODEL	
	S/W VER	
RESET	OUTPUT FORMAT	
EXIT	USER/FACTORY	

## 3. OSD Joystick and Button

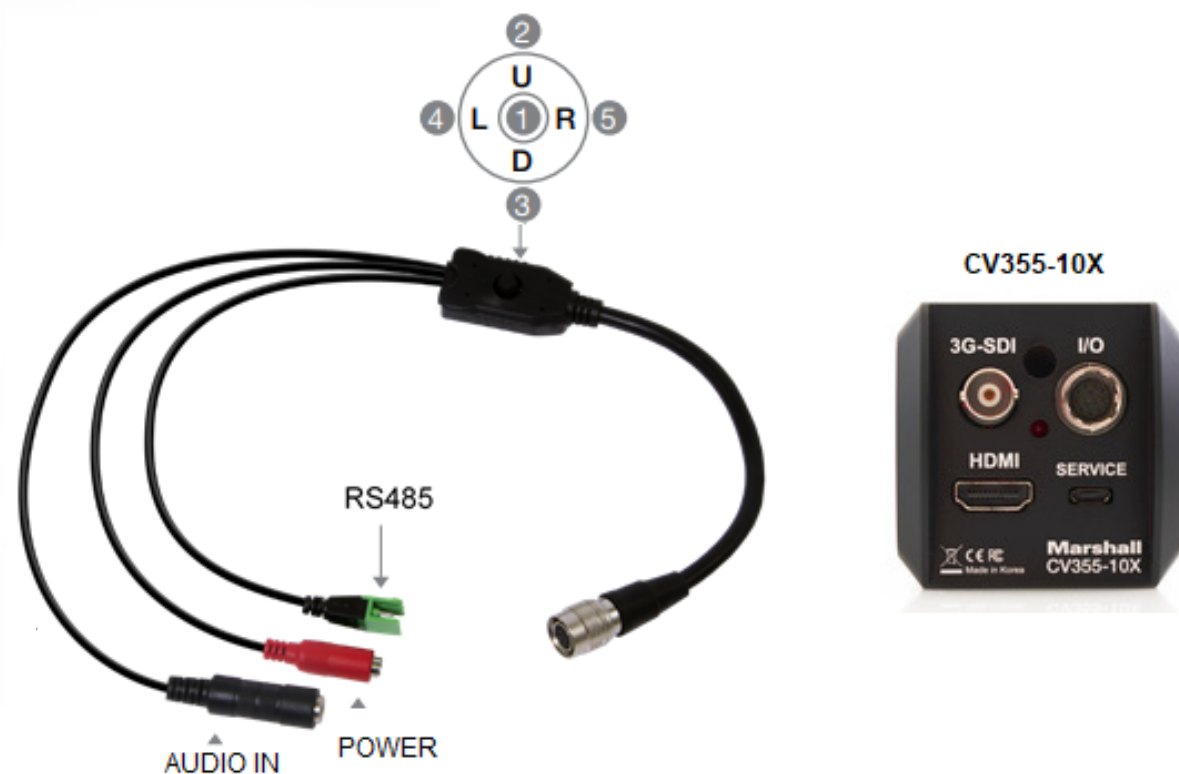

I/O Cable (included in box)

1. SET Used to access the menu and confirm selection.
2. UP Used to move the cursor up.
3. DOWN Used to move the cursor down.
4. LEFT Used to move the cursor left and change the value.
5. RIGHT Used to move the cursor to the right and change the value.

Press SET button to access the Main Menu

```

MAIN MENU
WB CONTROL >
AE CONTROL >
FOCUS CONTROL >
DAY/NIGHT >
AUDIO >
BACKLIGHT >
IMAGE CONTROL >
SPECIAL >
SETUP >
RESET >
EXIT
    
```


Use the UP & DOWN buttons to select the desired item.

Use the LEFT and RIGHT buttons to change the sub-item.

## 4. WB Control

Select WB CONTROL using the UP or DOWN button. You can change between AWB, ATW, PUSH, and MANUAL using the LEFT or RIGHT buttons.


- **AWB:** Continuously adjusts camera color balance in accordance with any change in color temperature changes within the range of 3,000°K to 8,000°K.
- **ATW:** Continuously adjusts camera color balance in accordance with any change in color temperature. Compensates for color temperature changes within the range of 1,900°K to 11,000°K.
- **ONE PUSH:** Color temperature will be manually adjusted by pushing the OSD button. Place the white paper in front of the camera when OSD button is pressed to obtain optimum result.
- **MANUAL:** Select this to fine-tune White Balance manually.  
You can adjust the blue and red tone level manually.
  1. **BLUE:** Adjust the Blue tone of the image. (0~255)
  2. **RED:** Adjust the Red tone of the image. (0~255)
- **INDOOR:** Select this to adjust white balance to indoor lighting condition.
- **OUTDOOR:** Select this to adjust white balance to outdoor lighting condition.

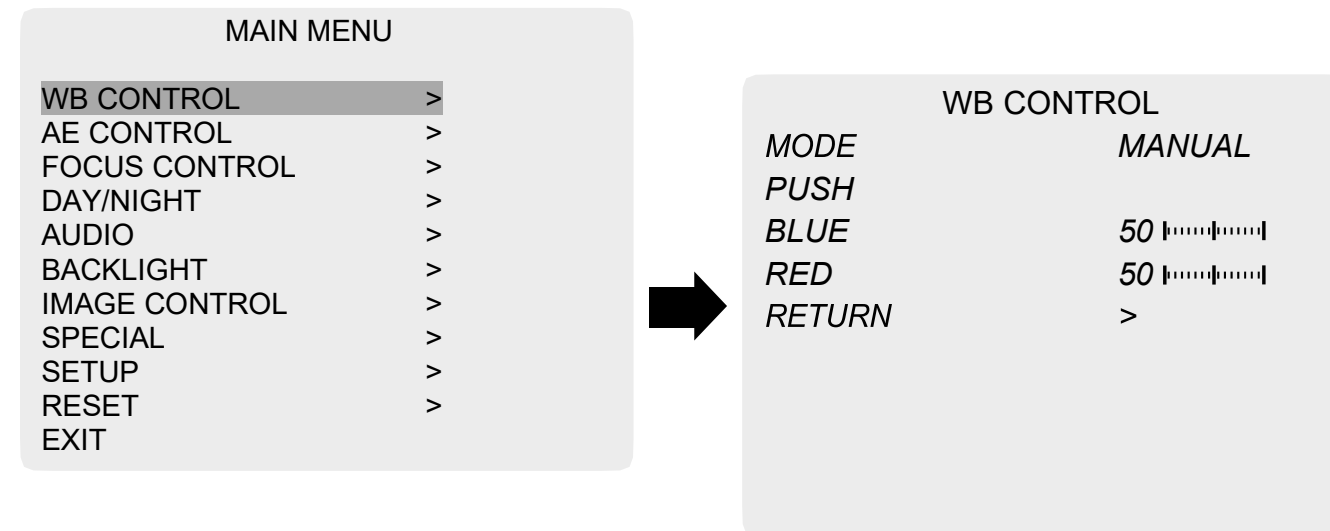

1. Adjust White Balance first by using the AWB or ATW mode before switching to MANUAL mode.
2. White Balance may not work properly under the following conditions. In this case, select the ATW mode.
  - When the ambient illumination of the subject is dim.
  - If the camera is directed towards a fluorescent light or is installed in place where illumination changes dramatically, the White Balance operation may become unstable.

## 5. AE Control


Select AE CONTROL using the UP or DOWN button. You can select one sub-mode using the UP or DOWN buttons.

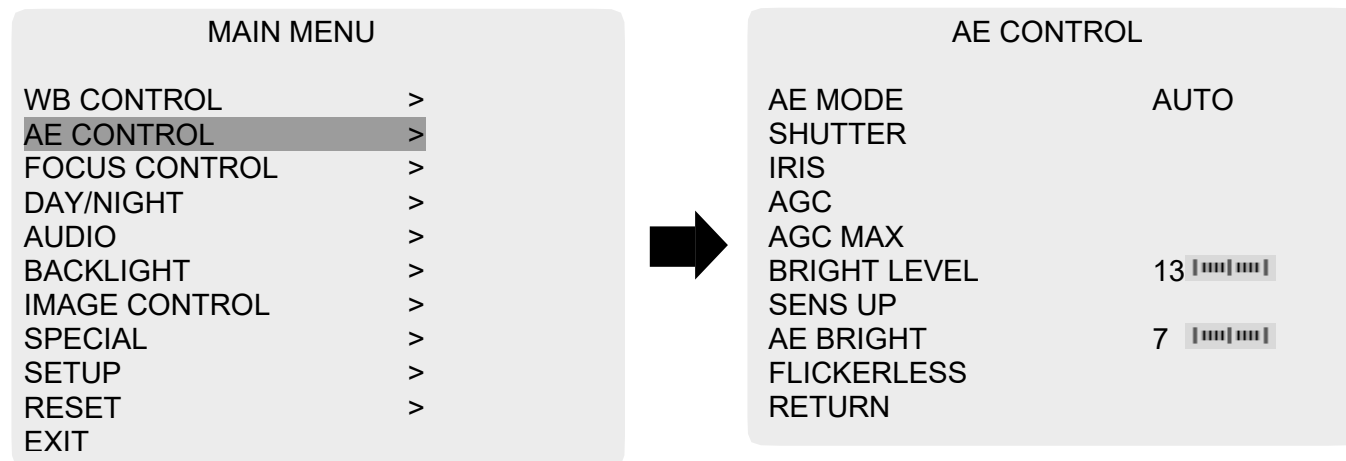

- **AUTO:** Adjusts the exposure level automatically. Detailed fine tuning options are available under this menu.
- **SHUT PRI:** Provides more detailed shutter speed options. All other controls are tuned for the selected shutter speed.
- **IRIS PRI:** Provides more detailed iris control options. All other controls are tuned for the selected iris.
- **AGC PRI:** Provides more detailed gain option. All other controls are tuned for the selected gain.
- **BRIGHT:** Provides bright exposure level control.
- **MANUAL:** Adjusts the exposure level manually.
  1. **SHUTTER:** Speed can be set at auto or manual. (NTSC: 1/30~1/10,000, PAL: 1/25~1/10,000)
  2. **IRIS:** Electronic Iris speed can be controlled. (F1.6~F16)
  3. **AGC:** Electronic gain level can be controlled. (0dB~75dB)
  4. **AGC MAX:** Used to set maximum gain value to control the video noise caused by Auto Gain Control. (0~15)
  5. **SENS UP:** Controls the digital slow shutter to allow extra light into the camera and adjust the picture quality. (off, x2~x15)
  6. **AE BRIGHT:** Select this to adjust auto exposure brightness levels. (0~24)
  7. **FLICKERLESS:** Provides a proper image sensor frequency to match the power frequency in order to minimize video flicker.

## 6. Focus Control

Select Focus Control using the UP or DOWN button. You can change between AUTO and Manual focus modes.

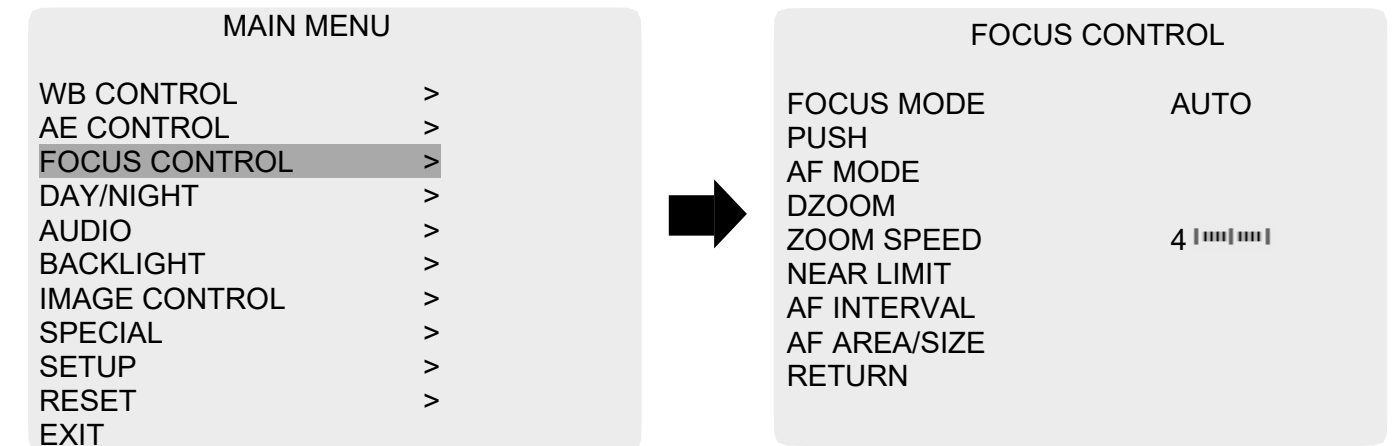


- **FOCUS MODE:** Adjust camera focus automatically or manually. When MANUAL mode is selected, initial focus position can be automatically adjusted by choosing PUSH menu.
- **AF MODE:** Focusing type can be set under this menu.
  1. **NORMAL:** Normal AF operation.
  2. **INTERVAL AF:** AF movement is carried out at interval setup from AF INTERVAL menu.
  3. **ZOOM TRIG:** When zoom position is changed, AF will be activated within 5 seconds.
- **DZOOM:** Digital zoom can be enabled. (x1~x12)
- **ZOOM SPEED:** Optical zoom speed can be set. (0~7)
- **NEAR LIMIT:** Set the limit of the tele control. (30cm~10M)
- **AF INTERVAL:** AF Interval time can be set under this menu. Initial setting is 5 seconds and it can be adjusted in 1 second increment.
- **AF AREA/SIZE:** Focus area can be manually adjusted. Camera focus is set to the center of the screen by default.

## 7. DAY / NIGHT

Select DAY/NIGHT using the UP or DOWN button. You can select one sub-mode from AUTO, COLOR, and NIGHT using the UP or DOWN buttons.

- **MODE:** Set camera to either color mode or B&W mode. (Auto, Day, Night)
- **DAY:** When set to DAY mode, camera stays in color and IR cut filter is engaged.
- **NIGHT:** When set to NIGHT mode, camera stays in B&W and IR cut filter is removed.
  1. **NIGHT COLOR:** When on, camera stays on color mode. Night (B&W) can be selected from this mode. (On, Off)
- **AUTO:** When set to AUTO mode, camera changes DAY and NIGHT mode automatically.
  1. **DELAY [SEC]:** Delay time between mode change can be adjusted.
  2. **D-> N LEVEL:** Adjust the level to switch from Day mode to Night mode.
  3. **N-> D LEVEL:** Adjust the level to switch from Night mode to Day mode.

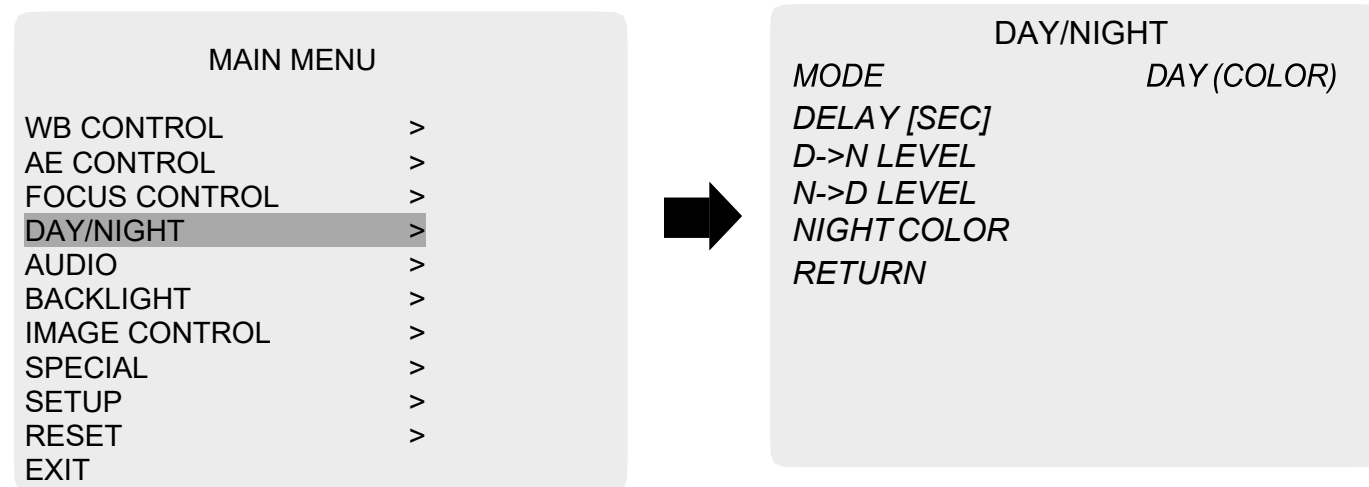


## 8. AUDIO

Select AUDIO using the UP or DOWN button and enter ON using SEL button. You can select one sub-mode using the UP or DOWN buttons.

- **MIC / LINE:** Select MIC or LINE for the audio input source.
- **AUDIO LEVEL:** Select this to adjust audio levels manually.
- **MIC ATTENUATOR:** Audio attenuation can be controlled from this menu to minimize the audio noise level
- **AGC LIMIT:** Audio gain limit can be controlled while MIC ATTENUATOR is in used.
  1. **SAMPLE BITS:** Select the bit depth of audio


**Line input does not provide power to the audio device. Mic will use Mic Bias 1.7V and up to 3mA max current.**

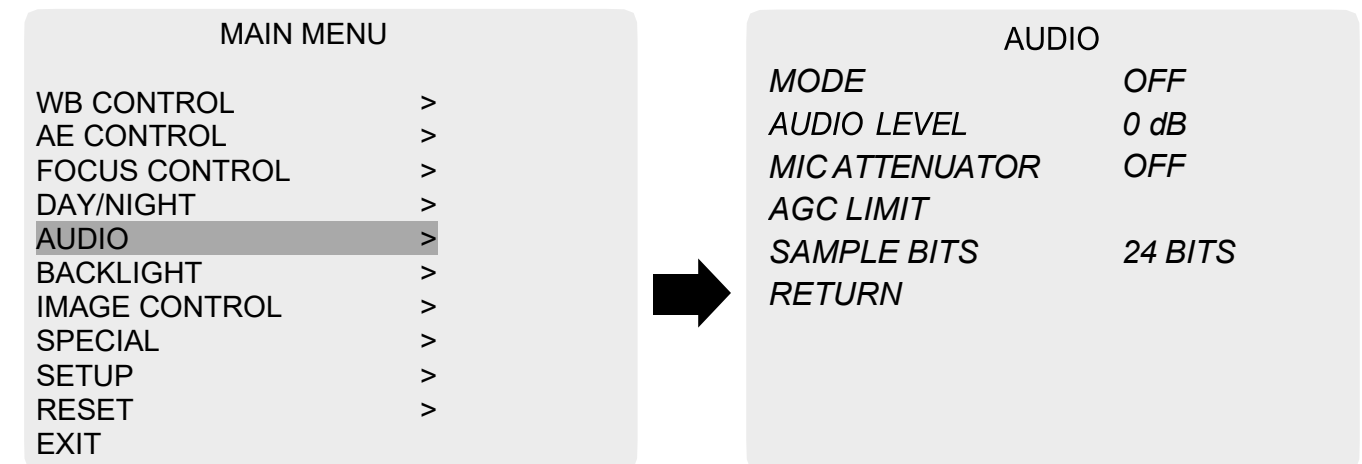

## 9. BACKLIGHT

Select BACKLIGHT using the UP or DOWN button.

You can Select BACKLIGHT, WDR, DWDR and DEFOG using the UP or DOWN buttons.

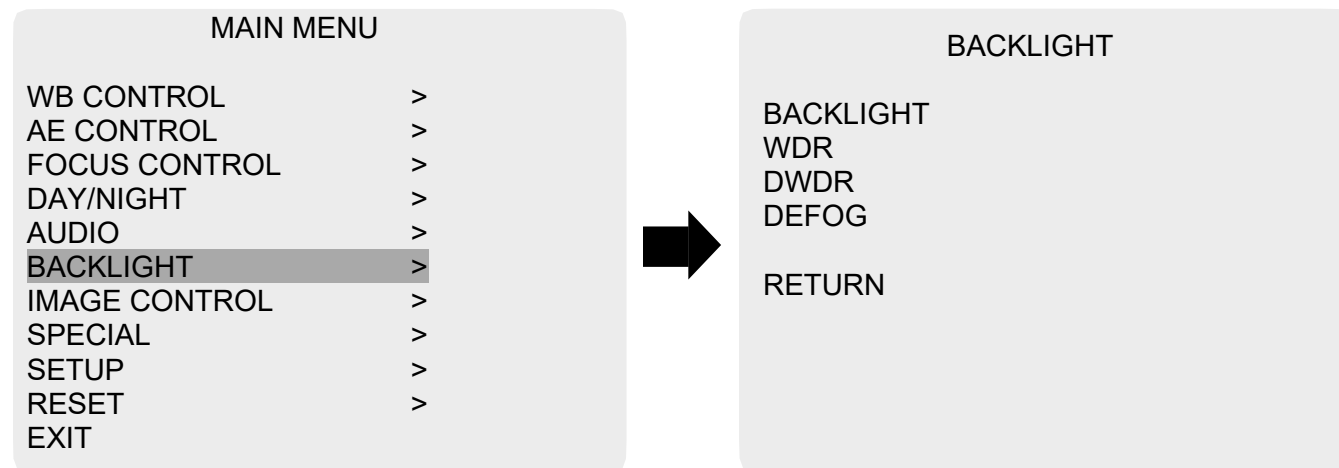


- **BACKLIGHT:** Select between different BACKLIGHT compensation modes.
  1. **BLC:** BLC enables back light compensation.
  2. **HLM:** HLM mode will mask out bright areas.
  3. **SPOT:** SPOT enables to create a user defined area for BLC.
- **WDR:** Sensor enables to view both object and background more clearly when background is too bright.
- **DWDR:** Digital algorithm enables to view both object and background more clearly when background is too bright
- **DEFOG:** This feature will help increase visibility in extreme weather conditions, such as fog, rain or in a very strong luminous intensity.

## 10. IMAGE CONTROL

Select IMAGE CONTROL using the UP or DOWN button.

You can select LENS SHADING, CONTRAST, HUE, and image related menu using the UP or DOWN buttons.

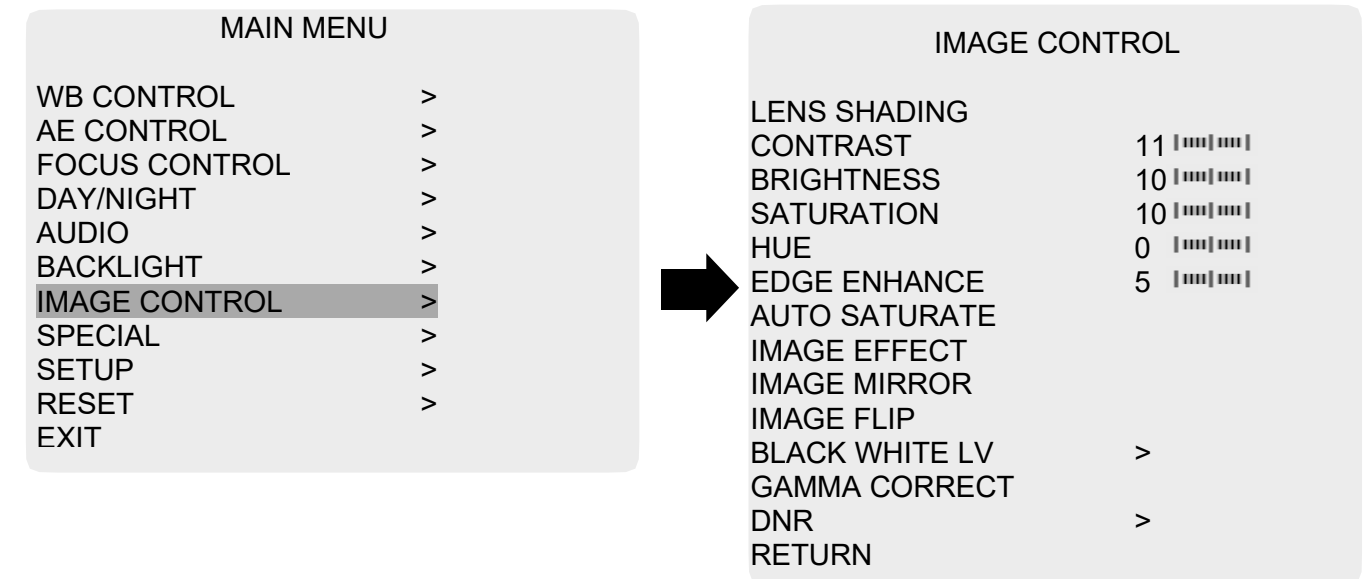


- **LENS SHADING:** Corrects inconsistent brightness level in the image.
- **CONTRAST:** Adjust the image contrast level.
- **BRIGHTNESS:** Adjust the image brightness level.
- **SATURATION:** Adjust the image saturation level.
- **HUE:** Adjust the image hue level.
- **EDGE ENHANCE:** Adjust the image sharpness level.
- **AUTO SATURATE:** Decrease saturation automatically when noise scene is detected.
- **IMAGE EFFECT:** Adjust different color schemes.
- **IMAGE MIRROR:** Adjust horizontal mirror effect.
- **IMAGE FLIP:** Adjust vertical flip effect.
- **BLACK WHITE LEVEL:** Adjust the image black level and white level value.
- **GAMMA CORRECT:** Adjust the image output gamma level.
- **DNR:** Reduces video noise at low ambient light  
 Select the DNR level from Auto, LOW, MIDDLE, and HIGH using the LEFT or RIGHT button.

## 11. SPECIAL

Select **SPECIAL** using the UP or DOWN button.

You can select **DEFOG**, **MOTION DETECT**, **BACKLIGHT**, **DEFECT PIXEL**, and **FLICKER DETECT** using the UP or DOWN buttons.

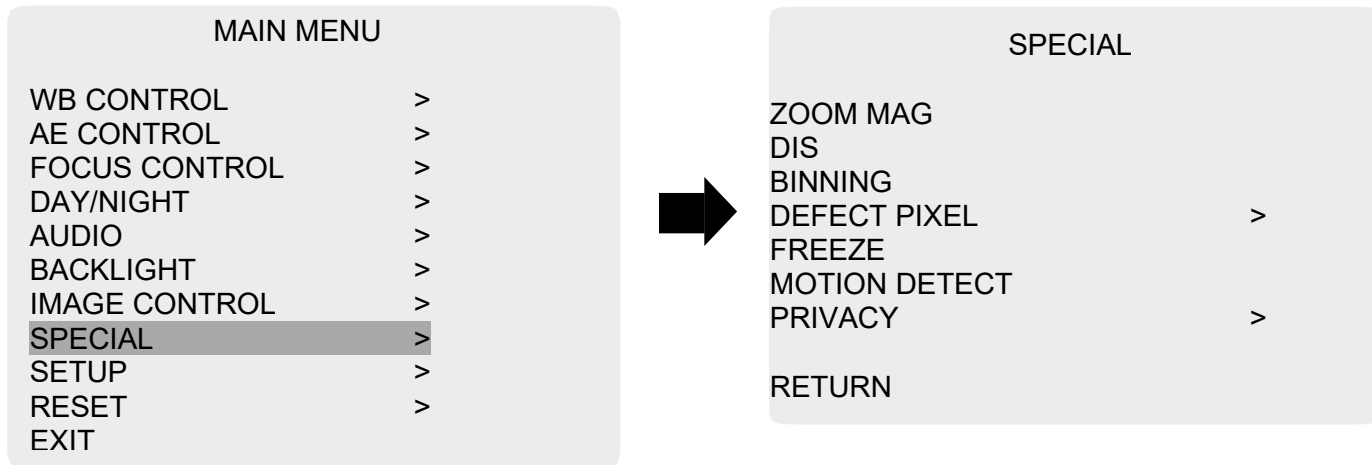


- **ZOOM MAG:** Turn ON or OFF the zoom ratio display on the top left corner of the image.
- **DIS:** This feature enables digital image stabilization.
- **BINNING:** Enable or disable pixel binning.
- **DEFECT PIXEL:** Advanced defective pixel correction menu.
- **FREEZE:** Freeze or defreeze the image output.
- **MOTION DETECT:** Enables motion detection zones.
- **PRIVACY:** Mask areas you want to hide on the screen by applying the privacy zones.

## 12. SETUP

CAMERA setup can be adjusted from this menu.

You can select **CAMERA ID**, **Communication**, **System Info**, and **Output Format** using the UP or DOWN buttons

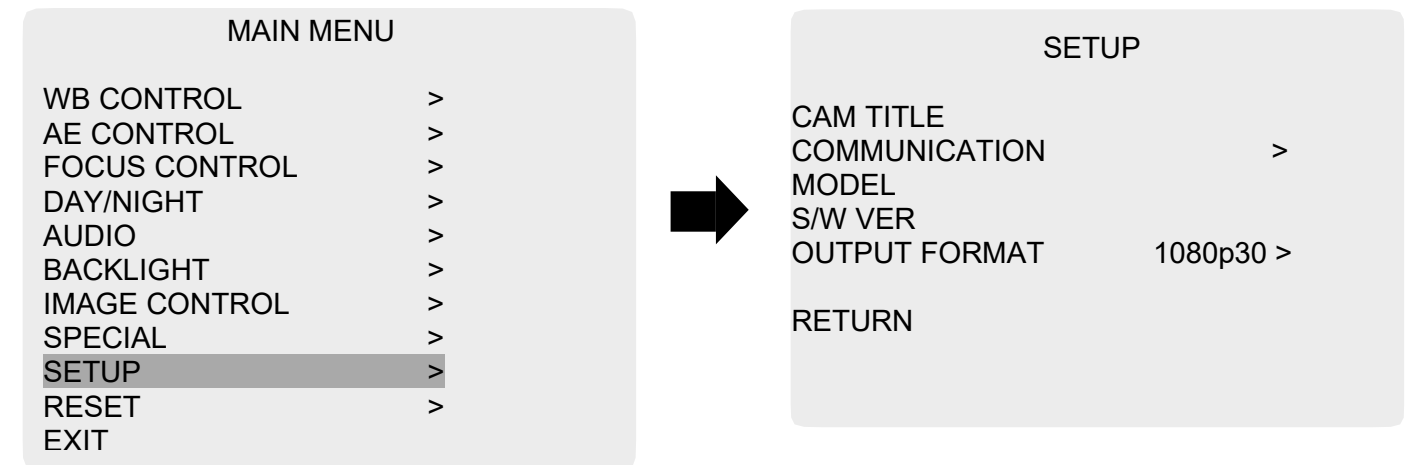

- **CAM TITLE:** Camera title can be turned ON or OFF.
- **COMMUNICATION:** VISCA communication can be adjusted.
  1. **CAM ID:** Camera ID can be setup. (0~254)
  2. **ID DISPLAY:** Camera ID display can be displayed.
  3. **BAUDRATE:** Camera baudrate can be set. (2400, 4800, 9600, 19200, 38400, 115200)
  4. **SAVE:** Save setting after applying the changes.
- **MODEL:** Displays product module number.
- **S/W VER:** Displays software version number.
- **OUTPUT FORMAT:** Camera resolution and frame rate can be set.

(1080 by default)

Select the **FRAME RATE** using the LEFT or RIGHT buttons.

Available Frame Rates are:

1920 x 1080p 60, 59.94, 50, 30. 29.97, 25, 24, 23.98

1920 x 1080i 60, 59.94, 50


1280 x 720p 60, 59.94, 50



## 13. RESET

Select **RESET** using the UP or DOWN button.

- **RESET:** Reset the camera settings the factory defaults or user setting value.

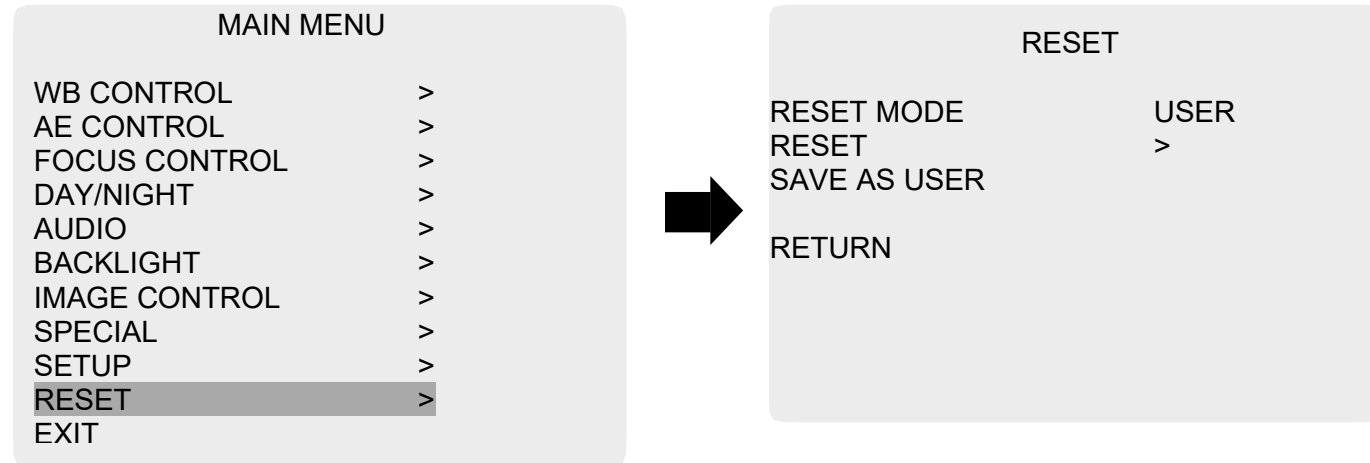

- **RESET MODE:** Set the camera setting to either “FACTORY” or “USER”.
  1. **USER:** Select “USER” if user saved setting value is needed.
  2. **FACTORY:** Select “FACTORY” if factory default setting is needed.
- **RESET:** Reset the camera to the mode set on RESET MODE.
- **SAVE AS USER:** Save the current camera settings as “USER”.

## 14. EXIT

Select **EXIT** using the UP or DOWN button.



- **SAVE:** Exit the setup after saving the value changes.

## 15. TROUBLESHOOTING

Before sending the camera for repair, please check below to make sure that the camera is installed correctly. If it still does not perform adequately, please consult with your supplier.

Problem	Solutions
Nothing appears on the screen.	<ul style="list-style-type: none"> <li>a. Check that all connected devices are powered on.</li> <li>b. Confirm that the voltage is correct.</li> <li>c. Confirm that the power supply provides enough current to power the camera.</li> <li>d. Check that all video cables are correctly connected.</li> </ul>
The picture is not clear.	<ul style="list-style-type: none"> <li>a. Check that your monitor is correctly adjusted.</li> <li>b. Confirm that the glass in front of the lens is clean. If there is dust, dirt, or fingerprints on the glass, the image quality will be affected. To clean the glass, use a soft, dry, and non-abrasive cloth or a commercially available lens cleaning set.</li> <li>c. Correctly adjust the focus.</li> </ul>
The picture has interference.	<ul style="list-style-type: none"> <li>a. The camera may be close to a high voltage source, such as a power generator.</li> <li>b. The BNC cable is not terminated properly.</li> <li>c. The video cables are not connected properly.</li> </ul>
The picture is flickering continually.	<ul style="list-style-type: none"> <li>a. Check the termination and set the impedance at 75Ω properly.</li> <li>b. Ensure that the camera is not pointing towards the Sun or any light source.</li> <li>c. Check if there is any intermediate device.</li> <li>d. Check if the distance of the video cable exceeds the maximum transferable limitation.</li> </ul>
The camera is not synchronizing with the reference signal.	<ul style="list-style-type: none"> <li>a. Make sure Tri-Level reference signal is used.</li> <li>b. Locking takes up to 1 minute depending on the signal strength. Make sure the sync LED is solidly lit.</li> <li>c. Check if the cable and connectors used in reference sync are in good condition.</li> <li>d. Make sure the cable length used in reference sync does not exceed 100 ft.</li> <li>e. Make sure OUTPUT EN is on when using the genlock output.</li> </ul>

## WARRANTY

For Warranty information please refer to Marshall website page:

<https://marshall-usa.com/company/warranty.php>

# Marshall

20608 Madrona Avenue, Torrance, CA 90503

Tel: (800) 800-6608 / (310) 333-0606 • Fax: 310-333-0688

[www.marshall-usa.com](http://www.marshall-usa.com)

[support@marshall-usa.com](mailto:support@marshall-usa.com)